


Boston Whaler Heavy Duty Gun'l Guard Kit - 15'/17' Models



Flexible Vinyl (A), covers old glue. Stretch taut around boat to remove wrinkles, tape to hold.

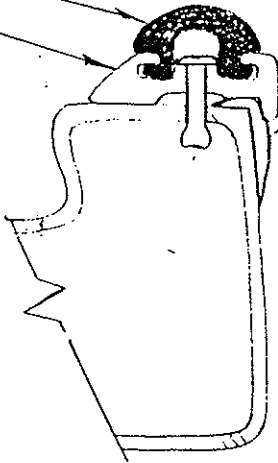

Rigid Vinyl (B), note pop rivet spacing below and install as shown. Use 13/64" drill for pop rivets. Tool for setting pop rivets is available at most hardware stores.

Rub Rail (C). Heat in sun or hot water to ease installation. Mallet may be used with care.

1. Remove old vinyl. Note: If boat has bow chock, remove and after installing new rub rail re-install Per DWG. # 15-0408-01 (included).
2. Install Flexible Vinyl (A).
3. Install Rigid Vinyl (B).
4. Insert Rub Rail (C).
5. Round Corner (E).
6. Trim back Ribs (D).
7. Fasten End (G).

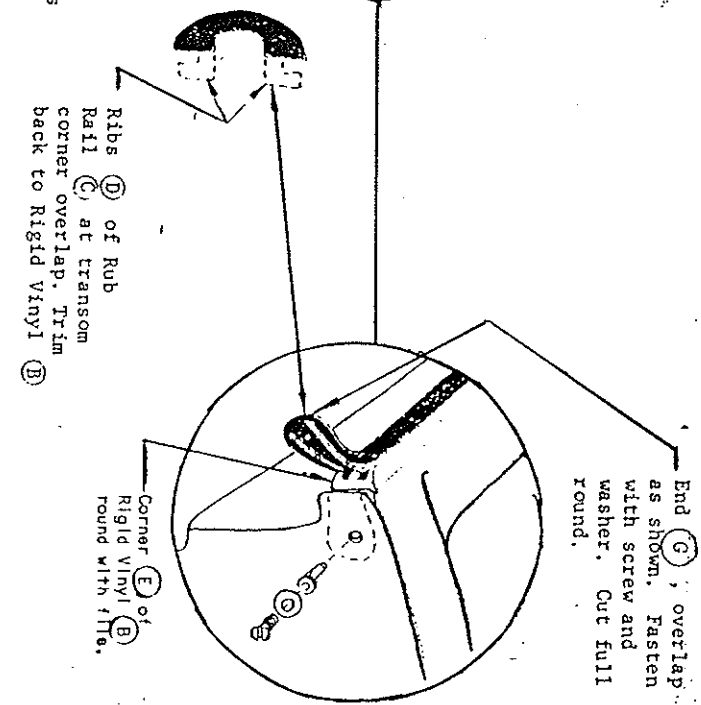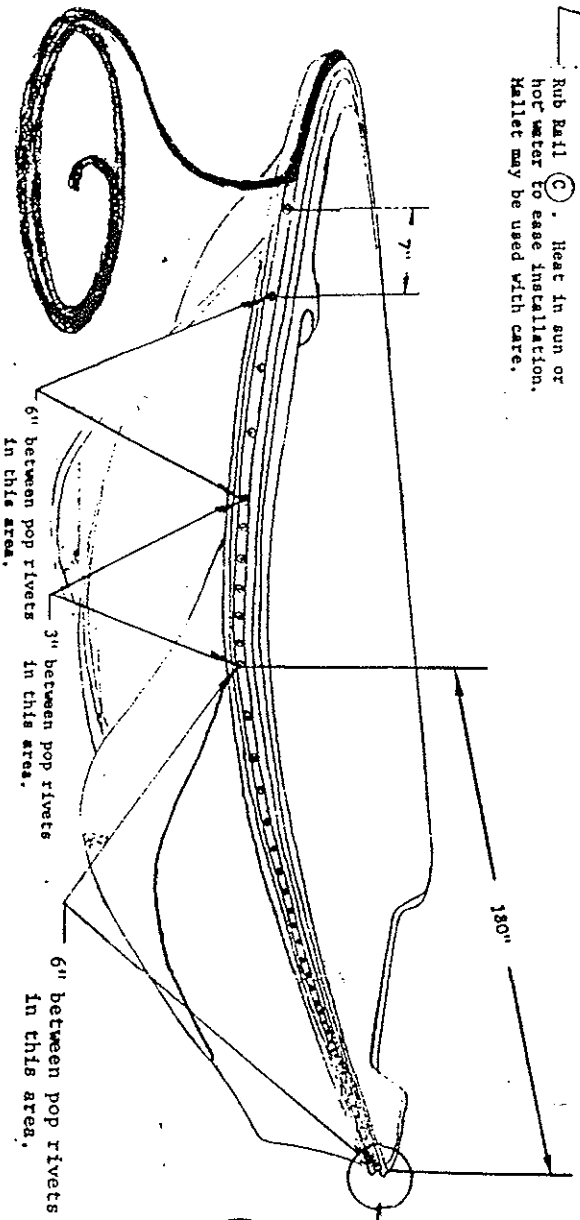

Part No.	Qty	Description
12-6562-00	2	Screw Anchor
82-0028-00	2	#10 Finish washer
82-0099-00	2	#10x1 O.H. MS
82-1361-00	86	Pop rivet
12-0820-00	1 pc.	Rigid Vinyl
12-0823-00	1 pc.	Rub rail
12-1307-00	1 pc.	Flexible vinyl
15-0408-01	1	Instruction DWG.
15-0105-01	1	Instruction DWG.

GENERAL
 No. 15-0105-01
 ENGINEERING DEPARTMENT

Boston Whaler, Inc.
 1140 Winohem St., Rockland, Mass.
 DATE: 6-5-70
 DRAWN: [Signature]
 CHECKED: [Signature]
 APPROVED: [Signature]

Parts List

End (G) overlap as shown. Fasten with screw and washer. Cut full round.

Corner (E) of Rigid Vinyl (B) round with file.

Ribs (D) of Rub Rail (C) at transom corner overlap. Trim back to Rigid Vinyl (B)